


# Avem Quirks Pty Ltd. **AQ Box**

AQ Box is the answer for all of your performance reporting issues. Either you have your yearly audit coming or there is a problem with your refrigerator (Medisafe Plus or third party), you will be on the top of everything. System can monitor multi units and you will be informed via email, if there is a power failure or your product / cabinet temperature is fluctuating. Automatically logs data to the Cloud. You can access information anywhere you have WiFi access. Minimal monthly cloud cost. Enables you to quickly respond to all temperature failures as soon as they happen (not hours later). Implement full paperless, automatic recording with minimal set up and maintenance.

## Main Features:


- 2 x RTD Class A temperature probes (-50°C to 200°C)
  - Accuracy  $\pm 0.15^{\circ}\text{C}$  @  $0^{\circ}\text{C}$ ,  $\pm 0.35^{\circ}\text{C}$  @  $100^{\circ}\text{C}$
- 8 hour Battery backup.
- 3 monitored inputs 0-10V.
- 3 cloud-controllable outputs.
- Flexible power supply options. (12-24V DC or 100-240V AC)
- 4G reporting to the Cloud.
- Full web reporting & accessibility for customer.
- Automatic twice daily "Strive for 5" reporting is available as a standard feature.

## 3D IMAGE

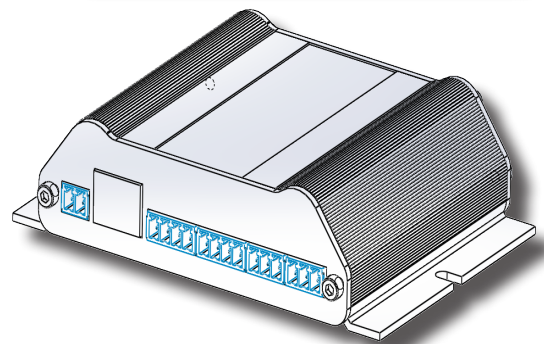

## Email Notification of Device Status & Unit Monitoring with Time & Date.

## Product & Fridge Temperature Graph

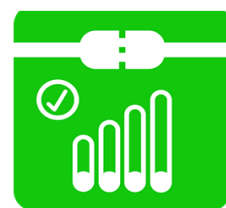

## Temperature Monitoring Device Working

### AVEM Field Test Unit 2:

9 Business Park Drive, Lynbrook, Victoria, Australia

### Device Working:

Device is now working perfectly

Report Time : 2017-08-24 12:58:40 +1000 AEST

[View Details](#)



Established 1922

## Medical and Surgical Requisites Pty Ltd

Call within Brisbane 07 3859 2900  
Phone 1300medsurg (1300 633 787)

33 Fulcrum Street Richlands Queensland 4077  
Email [medical@medsurg.com.au](mailto:medical@medsurg.com.au)

[www.medsurg.com.au](http://www.medsurg.com.au)  
Fax 07 3859 2995

RTA - AU29895

